




American Weigh Scales, Inc.

HP-Series

Digital Pocket Scale

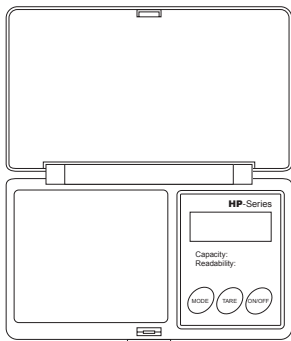

HP-201
HP-501

User Manual

American Weigh HP-Series

Thank you for purchasing the American Weigh HP-Series digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. Never load the scale with more than the maximum capacity. Overloading will permanently damage it! Avoid any exposure to extreme heat or cold. Your scale works better when operated at normal room temperature. Always allow the scale to acclimatize to normal room temperature for at least one hour before use.

Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale.

Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor.

Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care.

Only operate the scale on a stable, vibration free surface.

I. OPERATION

Place Scale on a horizontal flat surface.

1. Press [ON/OFF] key.
2. Wait until "0.00" is displayed.
3. Put the object(s) on the weighing platform.
4. Using the [MODE] key, you can switch between the weighing units.

II. TARE WEIGHING

1. Turn on scale as described above.
2. Place the "tare item" on the platform.
3. Press [TARE] and wait until "0.00" is displayed.
4. Add the "net-weight-item".

III. CALIBRATION

Calibration is NOT required before first use. Only calibrate if scale is not weighing properly.

Make sure you use the correct calibration weight for your scale or the calibration will not be accurate

HP-201: 200g calibration weight

HP-501: 500g calibration weight

1. Turn OFF the scale.
2. Press and hold the [MODE] key, then tap the [ON/OFF]. Now release both keys.
3. The display will show "000000" followed by "E-#", where # is the required calibration weight (in grams).
4. Place the required standard calibration weight (not included) onto the platform.

5. The display will show "Good" then shut down.
Calibration is complete!

IV. TROUBLESHOOTING

The primary reasons for inaccuracy or malfunction are low batteries, incorrect calibration, overload or operating on an unstable surface. Please keep this in mind and maintain and operate your scale properly. This scale is a precise instrument and must be handled with the utmost care and caution.

[Display] Elimination of errors

[OUE2] Recalibrate the scale as shown above.

[H] You are overloading the scale. Remove the excessive load immediately!

[-E] Readjust or replace batteries.

[888888] Use the scale in a more stable position

Specifications

Model	HP-201	HP-501
Capacity	200g / 1000ct / 128.6dwt / 7.05oz / 6.43ozt / 3086.5gn	500g / 250ct / 321.51dwt / 17.64oz / 16.08ozt / 7716gn
Resolution	0.01g / 0.05ct / 0.01dwt/ 0.001oz / 0.001ozt / 0.1gn	
Display	6 - Digit Backlit LCD	
Calibration Weight (not Included)	200g	500g
Platform Dimensions (inches)	2.75 x 2.5	
Scale Dimensions (inches)	5.5 x 3.1 x 0.75	
Power	4 x AAA Batteries (included)	
Gross Weight	0.60 lb	